Agilent GUI Data Logger Software for U1230 Series, U1240 Series, U1250 Series, and U1270 Series

Quick Start Guide

Agilent Technologies

Notices

© Agilent Technologies, Inc. 2006-2011

No part of this manual may be reproduced in any form or by any means (including electronic storage and retrieval or translation into a foreign language) without prior agreement and written consent from Agilent Technologies, Inc. as governed by United States and international copyright laws.

Manual Part Number

U1251-90023

Edition

Eighth Edition, August 26, 2011

Agilent Technologies, Inc.
5301 Stevens Creek Blvd.
Santa Clara, CA 95051 USA

Warranty

The material contained in this document is provided "as is," and is subject to change, without notice, in future editions. Further, to the maximum extent permitted by the applicable law, Agilent disclaims all warranties, either express or implied, with regard to this manual and any information contained herein, including but not limited to the implied warranties of merchantability and fitness for a particular purpose. Agilent shall not be liable for errors or for incidental or consequential damages in connection with the furnishing, use, or performance of this document or of any information contained herein. Should Agilent and the user have a separate written agreement with warranty terms covering the material in this document that conflict with these terms, the warranty terms in the separate agreement shall control.

Technology Licenses

The hardware and or software described in this document are furnished under a license and may be used or copied only in accordance with the terms of such license.

Restricted Rights Legend

U.S. Government Restricted Rights. Software and technical data rights granted to the federal government include only those rights customarily provided to end user customers. Agilent provides this customary commercial license in Software and technical data pursuant to FAR 12.211 (Technical Data) and 12.212 (Computer Software) and, for the Department of Defense, DFARS 252.227-7015 (Technical Data - Commercial Items) and DFARS 227.7202-3 (Rights in Commercial Computer Software or Computer Software Documentation).

Safety Notices

CAUTION

A **CAUTION** notice denotes a hazard. It calls attention to an operating procedure, practice, or the likes of that, if not correctly performed or adhered to, could result in damage to the product or loss of important data. Do not proceed beyond a **CAUTION** notice until the indicated conditions are fully understood and met.

WARNING

A WARNING notice denotes a hazard. It calls attention to an operating procedure, practice, or the likes of that, if not correctly performed or adhered to, could result in personal injury or death. Do not proceed beyond a WARNING notice until the indicated conditions are fully understood and met.

Table of Contents

Introduction 1
System requirements 1
Installing and Connecting the Multimeter 2
Data Logging/Virtual Meter 7
Downloading Data from the Multimeter 13
Square Wave Mode (for U1252A, U1253A, U1252B, and U1253B) 14
Remote Controls 16

Introduction

The U1231A, U1232A, U1233A, U1241A, U1242A, U1241B, U1242B, U1251A, U1252A, U1253A, U1251B, U1252B, U1253B, U1271A, U1272A, and U1273A multimeter models are equipped with a bi-directional (full duplex) communication capability that eases data storing from the multimeter to your PC.

The required accessory for this communication capability is the U1173A IR-USB cable and the Agilent GUI Data Logger application software, which is available for free on the Agilent Web site (http://www.agilent.com/find/hhTechLib).

NOTE The U1173A IR-USB cable functions as a serial RS-232 port that connects the multimeter to the USB port of your PC.

System requirements

Before installing the Agilent GUI Data Logger application software, ensure that your PC meets the following minimum system requirements.

Processors	1.6 GHz Pentium® IV or higher
32-bit OS platforms	Windows® XP, Windows® Vista, or Windows® 7 (32-bit and 64-bit[1])
Memory	512 MB or higher (recommended)
Hard disk space	1 GB free disk space at runtime
Supported models	Agilent U1231A, U1232A, U1233A, U1241A, U1242A, U1241B, U1242B, U1251A, U1252A, U1253A, U1251B, U1252B, U1253B, U1271A, U1272A, and U1273A
Prerequisite	Microsoft .NET Framework version 3.5[2], PL2303 driver

[1] Agilent GUI Data Logger for Windows 7 64-bit support is a 32-bit application running on a WOW64 (Windows-on-Windows 64-bit) emulator.

[2] Available with any of the following redistributable packages on the Microsoft® Web site:

Microsoft® .NET Framework version 3.5 Redistributable Package, or
Microsoft® .NET Framework version 4.0 Redistributable Package.

Installing and Connecting the Multimeter

NOTE You are recommended to disconnect the U1173A IR-USB cable before installing the software.

1 Download the Agilent GUI Data Logger Software for U1230 Series, U1240 Series, U1250 Series, and U1270 Series from http://www.agilent.com/find/hhTechLib.

2 Click setup to begin the installation. The required drivers and Microsoft .NET Framework are automatically installed if they are not detected on your PC.

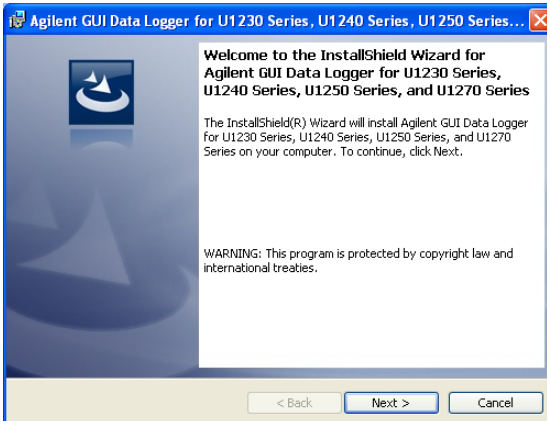
Agilent GUI Data Logger for U1230 Series, U1240 Series, U1250 Series...
Welcome to the InstallShield Wizard for Agilent GUI Data Logger for U1230 Series, U1240 Series, U1250 Series, and U1270 Series
The InstallShield(R) Wizard will install Agilent GUI Data Logger for U1230 Series, U1240 Series, U1250 Series, and U1270 Series on your computer. To continue, click Next.
WARNING: This program is protected by copyright law and international treaties.
< Back
Next >
Cancel

Figure 1 Agilent GUI Data Logger InstallShield Wizard

3 Click **Start > All Programs > Agilent > Agilent GUI Data Logger** to run the Agilent GUI Data Logger. Or alternatively, you can click the Agilent GUI Data Logger shortcut icon on your desktop.

Figure 2 Agilent GUI Data Logger shortcut icon

Figure 3 Agilent GUI Data Logger for U1230 Series, U1240 Series, U1250 Series, and U1270 Series

4 Connect the multimeter to your PC via the U1173A IR-USB cable (Figure 4) and turn on the multimeter.

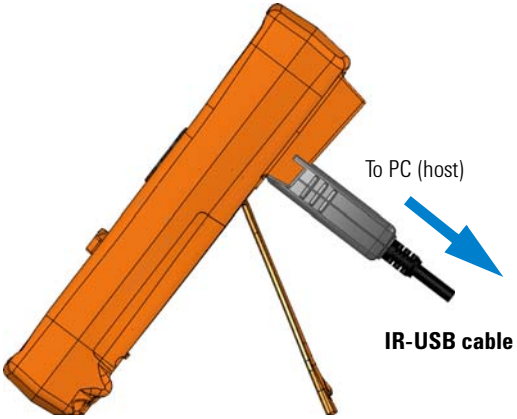

Figure 4 Cable connection for remote communication

NOTE The U1173A IR-USB cable is an optional accessory. You can purchase the cable at your nearest Agilent Sales Office.

5 Click on the **Communication** panel to configure the multimeter's communication settings.

i Select **Auto** (Figure 5) to allow the Agilent GUI Data Logger to automatically search for a connected multimeter.

ii Select **Manual** (Figure 5) to manually update the Agilent GUI Data Logger's communication settings.

Select the communication Port that your multimeter is connected to. Clicking **Update port** will update the port selections that are available on your PC.

Match the Baud Rate, Parity, and Data Bits settings (Figure 5) to the settings of the connected multimeter.

NOTE

- For U1271A, U1272A, and U1273A models, only baud rates of 9600 and 19200 bits/second are available.
- For U1231A, U1232A, and U1233A models, the baud rate, parity, and data bits settings are fixed to 9600 bits/second, None, and 8-bits vely.

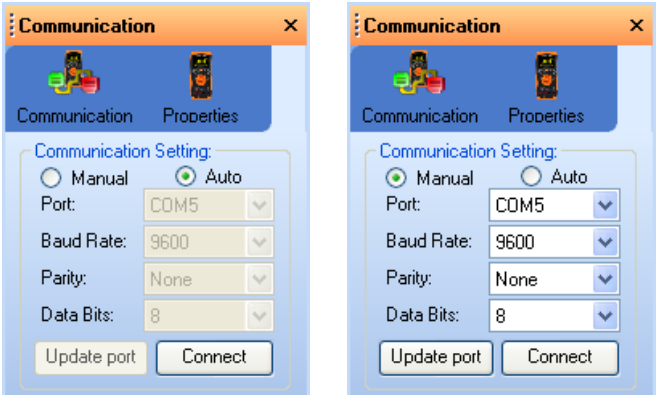

Figure 5 Communication panel

6 Click **Connect**.

If the Agilent GUI Data Logger's communication settings matches with the multimeter's communication settings, the Meter Connected notification will be shown in the status bar (Figure 6).

Figure 6 Meter connection success

7 If the connection fails (Figure 7), check that the U1173A IR-USB cable is connected securely to the multimeter and that the multimeter is turned on.

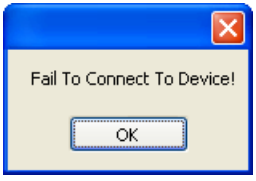

Figure 7 Meter connection failed

NOTE The RS232 port is not meant for hot plugging or hot swapping. Disconnecting the U1173A IR-USB cable when it is in use will crash the Agilent GUI Data Logger.

8 You can check the multimeter properties by clicking **Properties** (Figure 8).

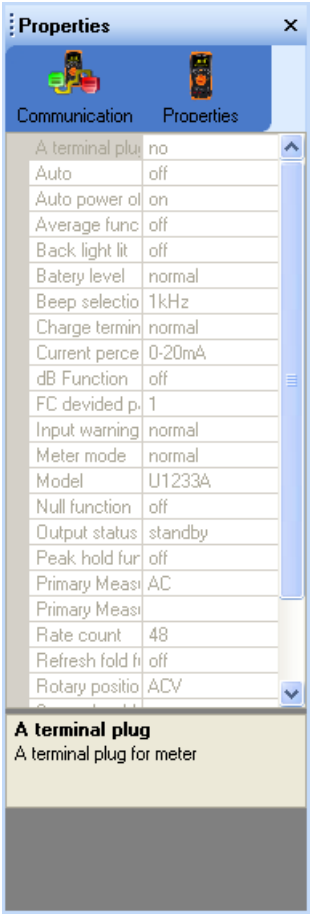

Figure 8 Properties panel

Data Logging/Virtual Meter

1 Set the rotary switch of the multimeter to the position of the preferred measuring function.

NOTE To know more about the functions at different rotary switch positions, refer to the ve multimeter's *User's Guide*.

2 Click the Data Logging icon and click the icon.

3 The measured value from the multimeter is shown on the Virtual Meter. Click the **Virtual Meter** tab to see the Virtual Meter. (Figure 9).

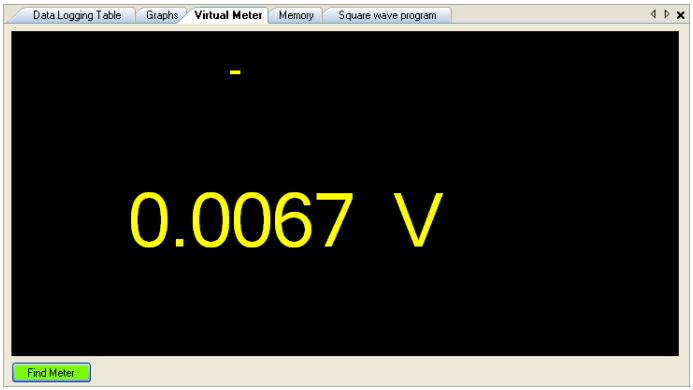

Figure 9 Virtual Meter

4 Measurement data from the multimeter is captured automatically and sorted in the Data Logging Table. Click the **Data Logging Table** tab to see the Data Logging Table. (Figure 10).

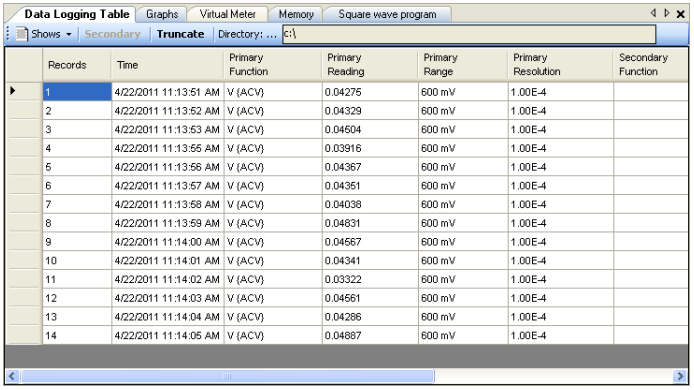

Records	Time	Primary Function	Primary Reading	Primary Range	Primary Resolution	Secondary Function
1	4/22/2011 11:13:51 AM	V (ACV)	0.04275	600 mV	1.00E-4	
2	4/22/2011 11:13:52 AM	V (ACV)	0.04329	600 mV	1.00E-4	
3	4/22/2011 11:13:53 AM	V (ACV)	0.04504	600 mV	1.00E-4	
4	4/22/2011 11:13:55 AM	V (ACV)	0.03916	600 mV	1.00E-4	
5	4/22/2011 11:13:56 AM	V (ACV)	0.04367	600 mV	1.00E-4	
6	4/22/2011 11:13:57 AM	V (ACV)	0.04351	600 mV	1.00E-4	
7	4/22/2011 11:13:58 AM	V (ACV)	0.04038	600 mV	1.00E-4	
8	4/22/2011 11:13:59 AM	V (ACV)	0.04831	600 mV	1.00E-4	
9	4/22/2011 11:14:00 AM	V (ACV)	0.04667	600 mV	1.00E-4	
10	4/22/2011 11:14:01 AM	V (ACV)	0.04341	600 mV	1.00E-4	
11	4/22/2011 11:14:02 AM	V (ACV)	0.03322	600 mV	1.00E-4	
12	4/22/2011 11:14:03 AM	V (ACV)	0.04561	600 mV	1.00E-4	
13	4/22/2011 11:14:04 AM	V (ACV)	0.04286	600 mV	1.00E-4	
14	4/22/2011 11:14:05 AM	V (ACV)	0.04887	600 mV	1.00E-4	

Figure 10 Data Logging Table

NOTE The Data Logging Table and Virtual Meter are running simultaneously. Figure 11 shows the data logging process.

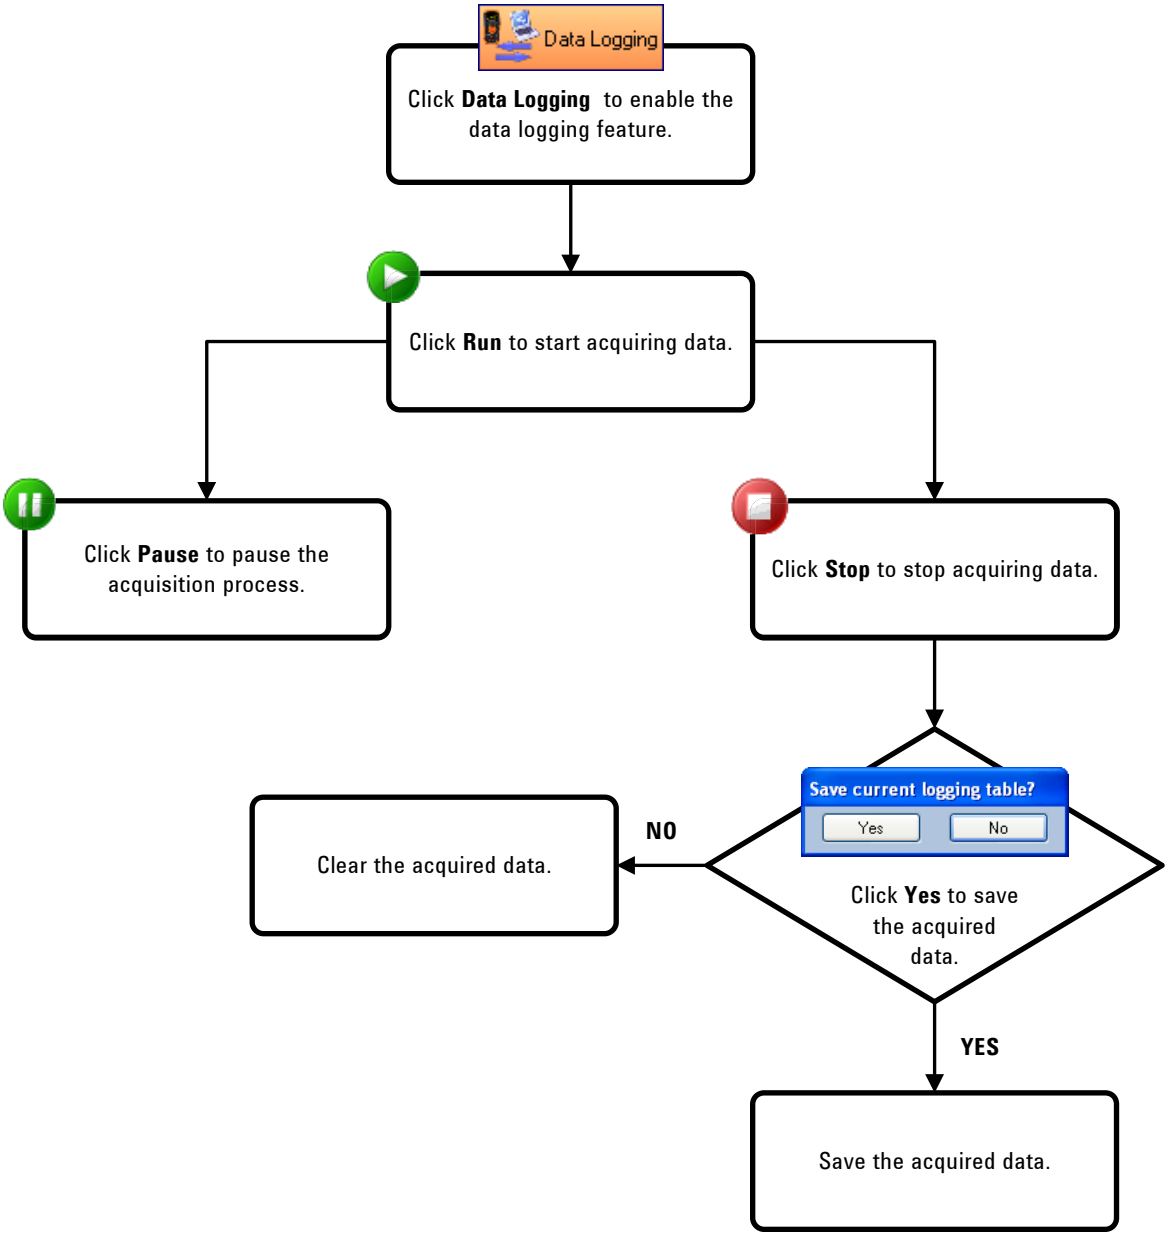
Data Logging
Click **Data Logging** to enable the data logging feature.
Click **Run** to start acquiring data.
Click **Pause** to pause the acquisition process.
Click **Stop** to stop acquiring data.
Save current logging table?
Yes
No
Click **Yes** to save the acquired data.
NO
Clear the acquired data.
YES
Save the acquired data.

Figure 11 Data logging process

5 You can set the saved data location in the **Data Logging Table** tab.

i Double click **Directory: ...** as shown in Figure 12.

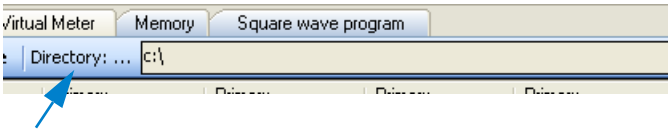

Figure 12 Directory

ii The Select your directory and filename dialog box will appear (Figure 13). Select a file name and path, and click **Save**.

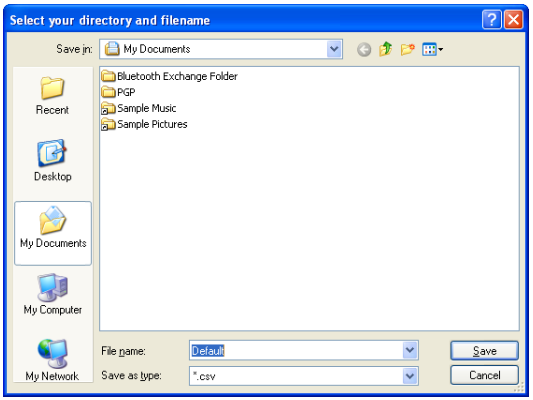

Figure 13 Select your directory and filename

6 You can choose to log the measurement data shown in the secondary display.

NOTE This option is not available for the U1231A, U1232A, and U1233A models.

Click **Secondary** to log the measurement data in the secondary display (this action will also display the secondary values in the **Virtual Meter** tab).

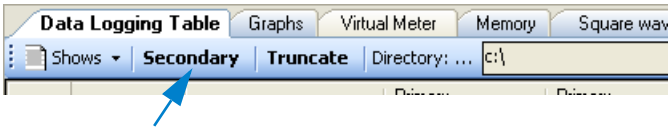

Figure 14 Secondary

NOTE You can change the maximum number of records in the Data Logging Table by clicking **Preferences > Options**.

7 Click the **Shows** menu (Figure 15) to customize the column display preference.

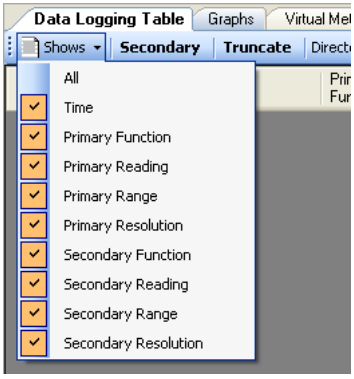

Figure 15 Column display customization

8 To display the measured data in the form of a strip graph, click on the **Graphs** tab. These graphs are meant for display purposes only.

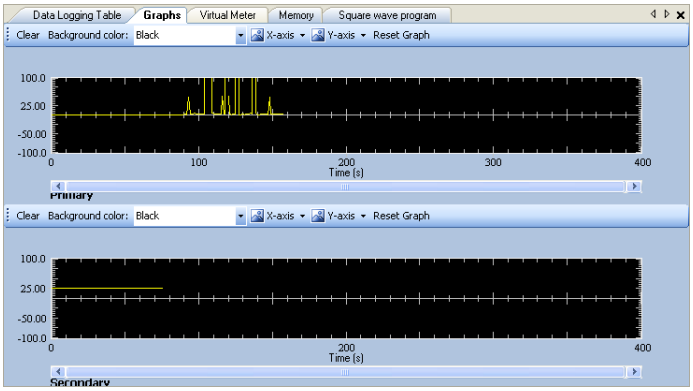

Figure 16 Graph function

Downloading Data from the Multimeter

NOTE

- This option is not available for the U1231A, U1232A, and U1233A models.
- The event log entries download is only available for U1271A, U1272A, and U1273A models.

1 You can transfer the data from your multimeter to your PC through the Agilent GUI Data Logger. The Agilent GUI Data Logger provides three types of memory downloading modes:
   - Manual Data Logging memory mode
   - Auto Data Logging memory mode
   - Event Data Logging memory mode
2 Click the

icon to select the memory loading mode.
3 Click the

icon to load the memory data.

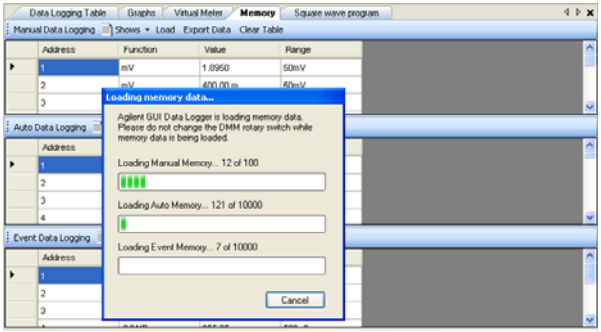

Figure 17 Memory mode

4 To clear the table or to export the data in the table, right-click on any area outside the table. A context menu will appear. Click **Export Data** or **Clear Table**.

Figure 18 Memory context menu

Square Wave Mode (for U1252A, U1253A, U1252B, and U1253B)

NOTE This option is not available for the U1231A, U1232A, U1233A, U1251A, U1251B, U1271A, U1272A, and U1273A models.

1 Turn the rotary switch of the multimeter to the OUT position.

2 Click the Square Wave icon to activate the square wave mode. There are two types of operations in the Square wave program tab (as shown in Figure 19):

- Manual
- Use Preprogrammed Table

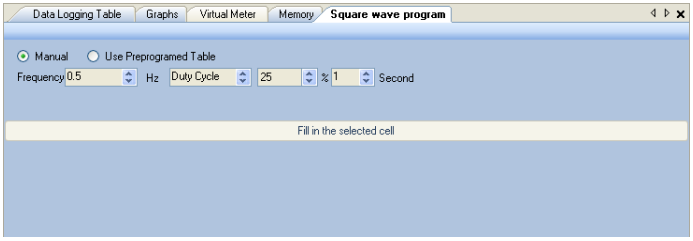

Figure 19 Square wave program operations

The frequency, duty cycle, and pulse width values can be set remotely from the Agilent GUI Data Logger.

When selecting **Use Preprogrammed Table**, use the , , and icons to start, stop, or pause the square wave operation.

NOTE Pulse width setting is applicable for manual operation only.

To input data into the square wave preprogrammable table, follow the instructions below:

1 Set the frequency, duty cycle, and duration accordingly (Figure 19).

2 Drag and drop the frequency value into the **Frequency** column cell in the table (Figure 20).

3 Select the ve **Duty Cycle** and **Duration** column cell and then click **Fill in the selected cell** button to input the parameters (Figure 20).

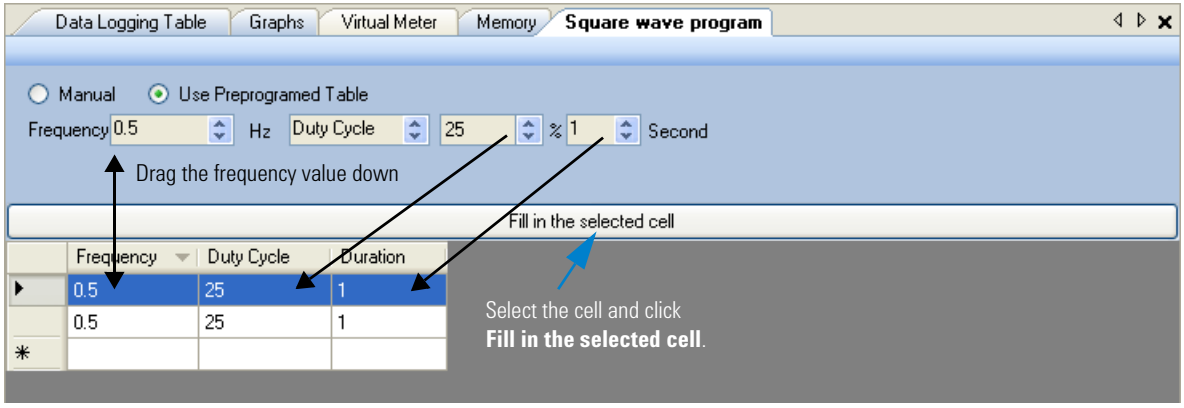

Figure 20 Square wave program settings

Remote Controls

NOTE The **Secondary** display remote controls are not available for the U1231A, U1232A, and U1233A models.

1 The multimeter can be controlled remotely according to the rotary switch position selected.

2 Click **Update Command**, to update the list of commands available for the rotary switch position selected. The list of commands can be viewed through the drop-down combo box menu (Figure 21).

3 Click **Send Command** to send the selected command parameters to the multimeter.

NOTE Clicking **Send Command** will stop all on-going data logging operations. Press the Data Logging icon followed by the icon again to restart the data logging operation.

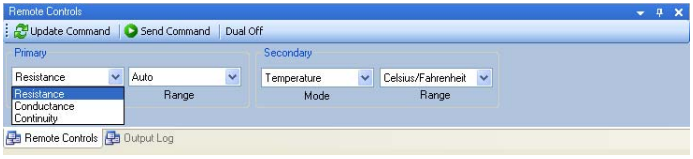

Figure 21 Remote Controls

NOTE Click the icon to view the *Agilent GUI Data Logger Software Help* for more information on the other functions and features of the Agilent GUI Data Logger.

www.agilent.com

Contact us
To obtain service, warranty or technical assistance, contact us at the following phone or fax numbers:

United States:
(tel) 800 829 4444 (fax) 800 829 4433
Canada:
(tel) 877 894 4414 (fax) 800 746 4866
China:
(tel) 800 810 0189 (fax) 800 820 2816
Europe:
(tel) 31 20 547 2111
Japan:
(tel) (81) 426 56 7832 (fax) (81) 426 56 7840
Korea:
(tel) (080) 769 0800 (fax) (080) 769 0900
Latin America:
(tel) (305) 269 7500
Taiwan:
(tel) 0800 047 866 (fax) 0800 286 331
Other Asia Pacific Countries:
(tel) (65) 6375 8100 (fax) (65) 6755 0042

Or visit Agilent World Wide Web at:
www.agilent.com/find/assist

Product specifications and descriptions in this document are subject to change without notice. Always refer to Agilent Web site for the latest revision.

© Agilent Technologies, Inc., 2006-2011

Eighth Edition, August 26, 2011
U1251-90023

Agilent Technologies